



Catalog Numbers (Amps)

FNQ-R-1/4	FNQ-R-1-6/10	FNQ-R-6
FNQ-R-3/10	FNQ-R-1-8/10	FNQ-R-6-1/4
FNQ-R-4/10	FNQ-R-2	FNQ-R-7
FNQ-R-1/2	FNQ-R-2-1/4	FNQ-R-7-1/2
FNQ-R-6/10	FNQ-R-2-1/2	FNQ-R-8
FNQ-R-3/4	FNQ-R-2-8/10	FNQ-R-9
FNQ-R-8/10	FNQ-R-3	FNQ-R-10
FNQ-R-1	FNQ-R-3-2/10	FNQ-R-12
FNQ-R-1-1/8	FNQ-R-3-1/2	FNQ-R-15
FNQ-R-1-1/4	FNQ-R-4	FNQ-R-17-1/2
FNQ-R-1-3/10	FNQ-R-4-1/2	FNQ-R-20
FNQ-R-1-4/10	FNQ-R-5	FNQ-R-25
FNQ-R-1-1/2	FNQ-R-5-6/10	FNQ-R-30